


CONFIGURATION GUIDE

ENGLISH

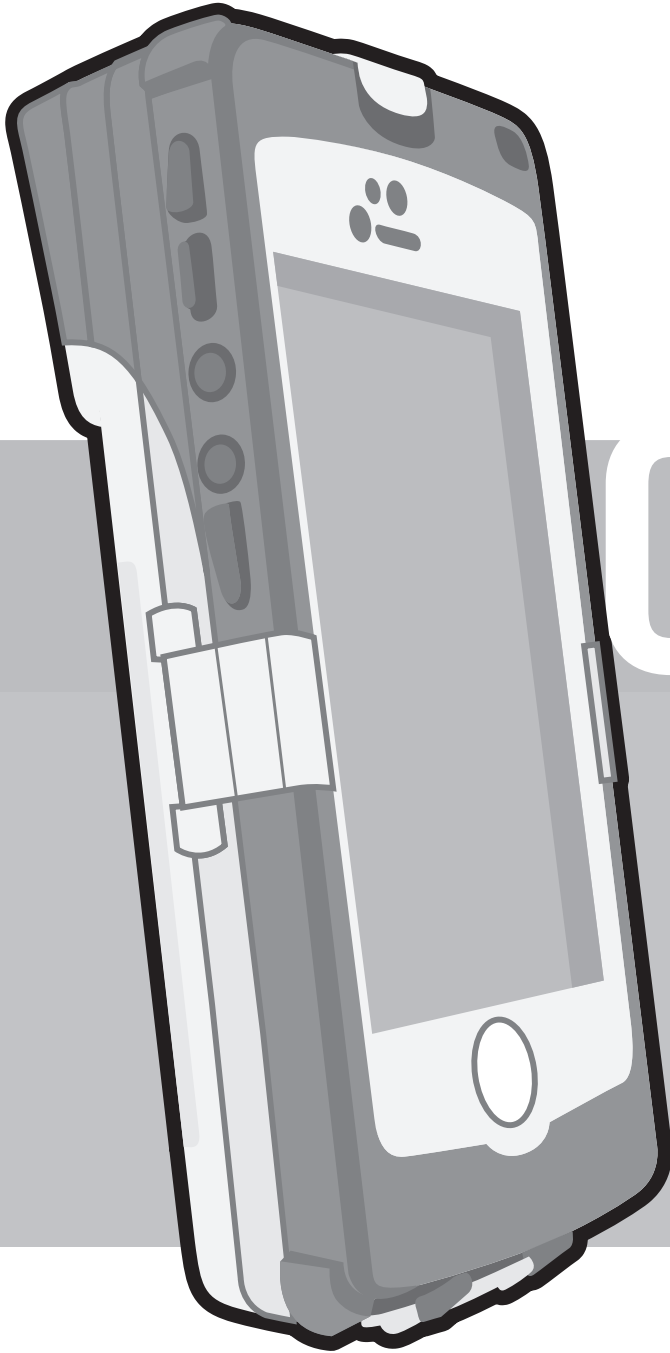

CR4405

VERSION 02
RELEASE DATE: SEPTEMBER 2014



www.codecorp.com



User Manual



[YouTube.com/codecorporation](https://www.youtube.com/codecorporation)

code
ADVANCED BARCODE READERS

Table of Contents

General Reading Mode Settings	6
Continuous Scan Both Imagers On	6 (A2)
Continuous Scan Off - Default.....	6 (A3)
Mirroring On.....	6 (B1)
Mirroring Off - Default.....	6 (B2)
Targeting On - Default.....	6 (B3)
Targeting Off.....	6 (B4)
Cell Phone Reading Enhancement On.....	6 (C1)
Cell Phone Reading Enhancement Off - Default.....	6 (C2)
Data Formatting (Prefix/Suffix) Settings.....	6-7
Erase Prefix & Suffix Data - Default	6 (C4)
Erase Prefix Data - Default.....	6 (D1)
Erase Suffix Data - Default	6 (D2)
Prefix AIM ID On	6 (D3)
Prefix AIM ID Off - Default.....	6 (D4)
Prefix Carriage Return Line Feed (iPhone App Mode Only)	6 (E1)
Prefix Comma.....	6 (E2)
Prefix Space.....	6 (E3)
Prefix Tab (iPhone Keyboard Mode Only).....	6 (E4)
Prefix Tab (iPhone App Mode Only).....	7 (A1)
Suffix Carriage Return (iPhone App Mode Only)	7 (A2)
Suffix Carriage Return Line Feed (iPhone App Mode Only)	7 (A3)
Suffix Comma.....	7 (A4)
Suffix Enter (iPhone Keyboard Mode Only)	7 (B1)
Suffix Line Feed (iPhone App Mode Only)	7 (B2)
Suffix Space.....	7 (B3)
Suffix Tab (iPhone Keyboard Mode Only).....	7 (B4)
Suffix Tab (iPhone App Mode Only)	7 (C1)
Translate all Characters to Uppercase On	7 (C2)
Translate all Characters to Uppercase Off - Default	7 (C3)
Symbologies.....	7-12
Australian Post On	7 (D2)
Australian Post Off - Default	7 (D3)
Aztec On - Default	7 (E1)
Aztec Off	7 (E2)
Aztec Inverse On.....	7 (E3)
Aztec Inverse & Normal On	7 (E4)
Codabar On - Default.....	8 (A1)
Codabar Off.....	8 (A2)
Codablock F On	8 (A3)
Codablock F Off - Default	8 (A4)
Code 11 On.....	8 (B1)
Code 11 Off - Default.....	8 (B2)
Code 11 Checksum Stripped from Result	8 (B3)
Code 128 On - Default	8 (B4)
Code 128 Off	8 (C1)
Code 32 (Italian Pharmacode) On.....	8 (C2)
Code 32 (Italian Pharmacode) Off - Default	8 (C3)
Code 39 On - Default	8 (C4)
Code 39 Off	8 (D1)
Code 39 Checksum On.....	8 (D2)
Code 39 Checksum Off - Default	8 (D3)
Code 39 Checksum Stripped from Result	8 (D4)
Code 39 Extended Full ASCII On.....	8 (E1)
Code 39 Extended Full ASCII Off - Default.....	8 (E2)
Code 93 On - Default	8 (E3)
Code 93 Off	8 (E4)

Table of Contents

Composite On.....	9 (A1)
Composite Off - Default.....	9 (A2)
Data Matrix Inverse On - Default.....	9 (A3)
Data Matrix Inverse Off.....	9 (A4)
Data Matrix Standard and Rectangle (Defaulted On and Cannot be Disabled)	
All GS1 DataBar On - Default.....	9 (B1)
All GS1 DataBar Off.....	9 (B2)
GS1 DataBar 14 On.....	9 (B3)
GS1 DataBar 14 Off.....	9 (B4)
GS1 DataBar Expanded On.....	9 (C1)
GS1 DataBar Expanded Off.....	9 (C2)
GS1 DataBar Expanded Stacked On.....	9 (C3)
GS1 DataBar Expanded Stacked Off.....	9 (C4)
GS1 DataBar Limited On.....	9 (D1)
GS1 DataBar Limited Off.....	9 (D2)
GS1 DataBar Stacked On.....	9 (D3)
GS1 DataBar Stacked Off.....	9 (D4)
Han Xin On.....	9 (E1)
Han Xin Off - Default.....	9 (E2)
Hong Kong 2 of 5 On.....	9 (E3)
Hong Kong 2 of 5 Off - Default.....	9 (E4)
IATA 2 of 5 On (IATA 2 of 5 is a variant of Straight 2 of 5; to enable IATA 2 of 5 scan Straight 2 of 5 On)	
IATA 2 of 5 Off (IATA 2 of 5 is a variant of Straight 2 of 5; to disable IATA 2 of 5 scan Straight 2 of 5 Off)	
Int 2 of 5 On - Default.....	10 (A1)
Int 2 of 5 Off.....	10 (A2)
Int 2 of 5 Checksum On.....	10 (A3)
Int 2 of 5 Checksum Off - Default.....	10 (A4)
Int 2 of 5 Checksum Stripped from Result.....	10 (B1)
Japan Post On.....	10 (B2)
Japan Post Off - Default.....	10 (B3)
KIX (Dutch Post) Code On.....	10 (B4)
KIX (Dutch Post) Code Off - Default.....	10 (C1)
Korean Post On.....	10 (C2)
Korean Post Off - Default.....	10 (C3)
Maxicode On.....	10 (C4)
Maxicode Off - Default.....	10 (D1)
Matrix 2 of 5 On.....	10 (D2)
Matrix 2 of 5 Off - Default.....	10 (D3)
Micro PDF417 On.....	10 (E1)
Micro PDF417 Off - Default.....	10 (E2)
MSI Plessey On.....	10 (E3)
MSI Plessey Off -Default.....	10 (E4)
NEC 2 of 5 On.....	11 (A1)
NEC 2 of 5 Off - Default.....	11 (A2)
PDF417 On - Default.....	11 (A3)
PDF417 Off.....	11 (A4)
Pharmacode On.....	11 (B1)
Pharmacode Off - Default.....	11 (B2)
Pharmacode Normal Barcode Decoding (Left to Right).....	11 (B3)
Pharmacode Reverse Barcode Decoding (Right to Left).....	11 (B4)
All QR Code On.....	11 (C1)
All QR Code Off.....	11 (C2)
Standard QR Code On - Default.....	11 (C3)
Standard QR Code Off.....	11 (C4)
Straight 2 of 5 On.....	11 (D1)
Straight 2 of 5 Off - Default.....	11 (D2)
Telepen On.....	11 (D3)
Telepen Off - Default.....	11 (D4)
Trioptic On.....	11 (E1)
Trioptic Off - Default.....	11 (E2)

Table of Contents

UK Plessey On	11 (E3)
UK Plessey Off - Default.....	11 (E4)
UK Royal Mail On.....	12 (A1)
UK Royal Mail Off - Default	12 (A2)
UPC On - Default.....	12 (A3)
UPC Off.....	12 (A4)
UPC Expansion On.....	12 (B1)
UPC Expansion Off - Default.....	12 (B2)
UPC Supplemental On	12 (B3)
UPC Supplemental Off - Default	12 (B4)
UPU ID-Tag On.....	12 (C1)
UPU ID-Tag Off - Default.....	12 (C2)
USPS Intelligent Mail/IMB/4-State CB On	12 (C3)
USPS Intelligent Mail/IMB/4-State CB Off - Default	12 (C4)
USPS Planet On	12 (D1)
USPS Planet Off - Default	12 (D2)
USPS Postnet On	12 (D3)
USPS Postnet Off - Default.....	12 (D4)
Keyboard Language Settings.....	12-13
US English Keyboard Mapping.....	12 (E2)
French Keyboard Mapping	12 (E3)
German Keyboard Mapping.....	12 (E4)
German-Swiss Keyboard Mapping.....	13 (A1)
Italian Keyboard Mapping.....	13 (A2)
Spanish Keyboard Mapping	13 (A3)
Reader Communication Settings	13
iPhone App Communication Mode.....	13 (B2)
iPhone Keyboard Communication Mode - Default.....	13 (B3)
USB Pass-Through Mode.....	13 (B4)
USB Downloader Mode.....	13 (C1)
Scan Delay.....	13
Duplicate Scan Disabled - Default.....	13 (C4)
1 Second Duplicate Scan Delay	13 (D1)
2 Second Duplicate Scan Delay	13 (D2)
3 Second Duplicate Scan Delay	13 (D3)
5 Second Duplicate Scan Delay	13 (D4)
10 Second Duplicate Scan Delay	13 (E1)
30 Second Duplicate Scan Delay	13 (E2)
1 Hour Duplicate Scan Delay	13 (E3)
1 Day Duplicate Scan Delay.....	13 (E4)
Power Settings	14
Sleep Timer - After 1 Minute of Idle Time - Default	14 (A2)
Sleep Timer - After 15 Minutes of Idle Time	14 (A3)
Sleep Timer - No sleep	14 (A4)
iPhone Intelligent Charging - Default	14 (B1)
iPhone Always Charging via Sled	14 (B2)
iPhone Never Charging via Sled.....	14 (B3)
Miscellaneous Settings.....	14
Read Both Wide and High Density Field - Default	14 (C2)
Read High Density Field Only	14 (C3)
Read Wide Field Only.....	14 (C4)

















Table of Contents

Reader Commands.....	14
Reader ID and Firmware Version.....	14 (D2)
Reader Text Commands On	14 (D3)
Reader Text Commands Off - Default	14 (D4)
Reset, Clear, and Save Reader Settings.....	14-15
Reset to App Mode Factory Defaults	14 (E2)
Reset to iPhone Keyboard Mode Factory Defaults.....	14 (E3)
Clear All JavaScript Rules.....	14 (E4)
Clear All Stored Data and Images	15 (A1)
Save All Reader Settings	15 (A2)
Reboot Reader.....	15 (A3)

General Reading Mode Settings	Continuous Scan Both Imagers On  M10012_01 A2	Continuous Scan Off - Default  M10011_01 A3	Intentionally Blank A4
	Mirroring On  M10125_01 B1	Mirroring Off - Default  M10124_02 B2	Targeting On - Default  M10153_01 B3
Cell Phone Reading Enhancement On  M10163_01 C1	Cell Phone Reading Enhancement Off - Default  M10162_01 C2	Data Formatting (Prefix / Suffix) Settings	
Erase Prefix Data - Default  M10126_01 D1	Erase Suffix Data - Default  M10130_01 D2	Prefix AIM ID On  M10199_01 D3	Prefix AIM ID Off - Default  M10198_01 D4
Prefix Carriage Return Line Feed (iPhone App Mode Only)  M10405_01 E1	Prefix Comma  M10127_01 E2	Prefix Space  M10128_01 E3	Prefix Tab (iPhone Keyboard Mode Only)  M10129_01 E4

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>Prefix Tab (iPhone App Mode Only)</p>  <p>M10319_01</p> <p style="text-align: right;">A1</p>	<p>Suffix Carriage Return (iPhone App Mode Only)</p>  <p>M10320_01</p> <p style="text-align: right;">A2</p>	<p>Suffix Carriage Return Line Feed (iPhone App Mode Only)</p>  <p>M10322_01</p> <p style="text-align: right;">A3</p>	<p>Suffix Comma</p>  <p>M10131_01</p> <p style="text-align: right;">A4</p>
<p>Suffix Enter (iPhone Keyboard Mode Only)</p>  <p>M10134_01</p> <p style="text-align: right;">B1</p>	<p>Suffix Line Feed (iPhone App Mode Only)</p>  <p>M10321_01</p> <p style="text-align: right;">B2</p>	<p>Suffix Space</p>  <p>M10132_01</p> <p style="text-align: right;">B3</p>	<p>Suffix Tab (iPhone Keyboard Mode Only)</p>  <p>M10133_01</p> <p style="text-align: right;">B4</p>
<p>Suffix Tab (iPhone App Mode Only)</p>  <p>M10323_01</p> <p style="text-align: right;">C1</p>	<p>Translate all Characters to Uppercase On</p>  <p>M10220_02</p> <p style="text-align: right;">C2</p>	<p>Translate all Characters to Uppercase Off - Default</p>  <p>M10426_01</p> <p style="text-align: right;">C3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C4</p>
<p style="text-align: center;">Symbologies</p>	<p>Australian Post On</p>  <p>M10288_02</p> <p style="text-align: right;">D2</p>	<p>Australian Post Off - Default</p>  <p>M10289_02</p> <p style="text-align: right;">D3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D4</p>
	<p>Aztec On - Default</p>  <p>M10018_01</p> <p style="text-align: right;">E1</p>	<p>Aztec Off</p>  <p>M10019_01</p> <p style="text-align: right;">E2</p>	<p>Aztec Inverse On</p>  <p>M10020_01</p> <p style="text-align: right;">E3</p>

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>Codabar On - Default</p>  <p>M10022_01</p> <p style="text-align: right;">A1</p>	<p>Codabar Off</p>  <p>M10023_01</p> <p style="text-align: right;">A2</p>	<p>Codablock F On</p>  <p>M10027_01</p> <p style="text-align: right;">A3</p>	<p>Codablock F Off - Default</p>  <p>M10026_01</p> <p style="text-align: right;">A4</p>
<p>Code 11 On</p>  <p>M10029_01</p> <p style="text-align: right;">B1</p>	<p>Code 11 Off - Default</p>  <p>M10028_01</p> <p style="text-align: right;">B2</p>	<p>Code 11 Checksum Stripped from Result</p>  <p>M10031_01</p> <p style="text-align: right;">B3</p>	<p>Code 128 On - Default</p>  <p>M10044_01</p> <p style="text-align: right;">B4</p>
<p>Code 128 Off</p>  <p>M10045_01</p> <p style="text-align: right;">C1</p>	<p>Code 32 (Italian Pharmacode) On</p>  <p>M10239_02</p> <p style="text-align: right;">C2</p>	<p>Code 32 (Italian Pharmacode) Off - Default</p>  <p>M10238_02</p> <p style="text-align: right;">C3</p>	<p>Code 39 On - Default</p>  <p>M10033_01</p> <p style="text-align: right;">C4</p>
<p>Code 39 Off</p>  <p>M10034_01</p> <p style="text-align: right;">D1</p>	<p>Code 39 Checksum On</p>  <p>M10036_01</p> <p style="text-align: right;">D2</p>	<p>Code 39 Checksum Off - Default</p>  <p>M10035_01</p> <p style="text-align: right;">D3</p>	<p>Code 39 Checksum Stripped from Result</p>  <p>M10037_01</p> <p style="text-align: right;">D4</p>
<p>Code 39 Extended Full ASCII On</p>  <p>M10039_01</p> <p style="text-align: right;">E1</p>	<p>Code 39 Extended Full ASCII Off - Default</p>  <p>M10038_01</p> <p style="text-align: right;">E2</p>	<p>Code 93 On - Default</p>  <p>M10042_01</p> <p style="text-align: right;">E3</p>	<p>Code 93 Off</p>  <p>M10043_01</p> <p style="text-align: right;">E4</p>

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>Composite On</p>  <p>M10047_01</p> <p>A1</p>	<p>Composite Off - Default</p>  <p>M10046_01</p> <p>A2</p>	<p>Data Matrix Inverse On - Default</p>  <p>M10051_03</p> <p>A3</p>	<p>Data Matrix Inverse Off</p>  <p>M10050_03</p> <p>A4</p>
<p>All GS1 DataBar On - Default</p>  <p>M10054_01</p> <p>B1</p>	<p>All GS1 DataBar Off</p>  <p>M10055_01</p> <p>B2</p>	<p>GS1 DataBar 14 On</p>  <p>M10057_03</p> <p>B3</p>	<p>GS1 DataBar 14 Off</p>  <p>M10355_02</p> <p>B4</p>
<p>GS1 DataBar Expanded On</p>  <p>M10059_03</p> <p>C1</p>	<p>GS1 DataBar Expanded Off</p>  <p>M10417_02</p> <p>C2</p>	<p>GS1 DataBar Expanded Stacked On</p>  <p>M10357_02</p> <p>C3</p>	<p>GS1 DataBar Expanded Stacked Off</p>  <p>M10356_02</p> <p>C4</p>
<p>GS1 DataBar Limited On</p>  <p>M10056_03</p> <p>D1</p>	<p>GS1 DataBar Limited Off</p>  <p>M10354_02</p> <p>D2</p>	<p>GS1 DataBar Stacked On</p>  <p>M10058_03</p> <p>D3</p>	<p>GS1 DataBar Stacked Off</p>  <p>M10353_02</p> <p>D4</p>
<p>Han Xin On</p>  <p>M10248_01</p> <p>E1</p>	<p>Han Xin Off - Default</p>  <p>M10249_01</p> <p>E2</p>	<p>Hong Kong 2 of 5 On</p>  <p>M10079_01</p> <p>E3</p>	<p>Hong Kong 2 of 5 Off - Default</p>  <p>M10078_02</p> <p>E4</p>

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>Int 2 of 5 On - Default</p>  <p>M10060_01</p> <p>A1</p>	<p>Int 2 of 5 Off</p>  <p>M10061_01</p> <p>A2</p>	<p>Int 2 of 5 Checksum On</p>  <p>M10235_01</p> <p>A3</p>	<p>Int 2 of 5 Checksum Off - Default</p>  <p>M10234_01</p> <p>A4</p>
<p>Int 2 of 5 Checksum Stripped from Result</p>  <p>M10065_01</p> <p>B1</p>	<p>Japan Post On</p>  <p>M10292_02</p> <p>B2</p>	<p>Japan Post Off - Default</p>  <p>M10293_02</p> <p>B3</p>	<p>KIX (Dutch Post) Code On</p>  <p>M10290_02</p> <p>B4</p>
<p>KIX (Dutch Post) Code Off - Default</p>  <p>M10291_02</p> <p>C1</p>	<p>Korean Post On</p>  <p>M10358_01</p> <p>C2</p>	<p>Korean Post Off - Default</p>  <p>M10359_01</p> <p>C3</p>	<p>Maxicode On</p>  <p>M10067_02</p> <p>C4</p>
<p>Maxicode Off - Default</p>  <p>M10066_01</p> <p>D1</p>	<p>Matrix 2 of 5 On</p>  <p>M10069_01</p> <p>D2</p>	<p>Matrix 2 of 5 Off - Default</p>  <p>M10068_01</p> <p>D3</p>	<p>Intentionally Blank</p> <p>D4</p>
<p>Micro PDF417 On</p>  <p>M10073_01</p> <p>E1</p>	<p>Micro PDF417 Off - Default</p>  <p>M10072_01</p> <p>E2</p>	<p>MSI Plessey On</p>  <p>M10076_01</p> <p>E3</p>	<p>MSI Plessey Off -Default</p>  <p>M10077_01</p> <p>E4</p>

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>NEC 2 of 5 On</p>  <p>M10082_01</p> <p>A1</p>	<p>NEC 2 of 5 Off - Default</p>  <p>M10083_01</p> <p>A2</p>	<p>PDF417 On - Default</p>  <p>M10070_01</p> <p>A3</p>	<p>PDF417 Off</p>  <p>M10071_01</p> <p>A4</p>
<p>Pharmacode On</p>  <p>M10275_02</p> <p>B1</p>	<p>Pharmacode Off - Default</p>  <p>M10274_03</p> <p>B2</p>	<p>Pharmacode Normal Barcode Decoding (Left to Right)</p>  <p>M10281_02</p> <p>B3</p>	<p>Pharmacode Reverse Barcode Decoding (Right to Left)</p>  <p>M10280_02</p> <p>B4</p>
<p>All QR Code On</p>  <p>M10101_02</p> <p>C1</p>	<p>All QR Code Off</p>  <p>M10351_03</p> <p>C2</p>	<p>Standard QR Code On - Default</p>  <p>M10095_02</p> <p>C3</p>	<p>Standard QR Code Off</p>  <p>M10096_01</p> <p>C4</p>
<p>Straight 2 of 5 On</p>  <p>M10241_01</p> <p>D1</p>	<p>Straight 2 of 5 Off - Default</p>  <p>M10240_01</p> <p>D2</p>	<p>Telepen On</p>  <p>M10103_01</p> <p>D3</p>	<p>Telepen Off - Default</p>  <p>M10104_01</p> <p>D4</p>
<p>Trioptic On</p>  <p>M10041_01</p> <p>E1</p>	<p>Trioptic Off - Default</p>  <p>M10040_01</p> <p>E2</p>	<p>UK Plessey On</p>  <p>M10237_02</p> <p>E3</p>	<p>UK Plessey Off - Default</p>  <p>M10236_02</p> <p>E4</p>

CR4405 Configuration Guide














NOTE: The configuration change will take effect immediately and be saved to memory.

<p>UK Royal Mail On</p>  <p>M10294_02</p> <p style="text-align: right;">A1</p>	<p>UK Royal Mail Off - Default</p>  <p>M10295_02</p> <p style="text-align: right;">A2</p>	<p>UPC On - Default</p>  <p>M10105_01</p> <p style="text-align: right;">A3</p>	<p>UPC Off</p>  <p>M10106_01</p> <p style="text-align: right;">A4</p>
<p>UPC Expansion On</p>  <p>M10108_01</p> <p style="text-align: right;">B1</p>	<p>UPC Expansion Off - Default</p>  <p>M10107_01</p> <p style="text-align: right;">B2</p>	<p>UPC Supplemental On</p>  <p>M10110_01</p> <p style="text-align: right;">B3</p>	<p>UPC Supplemental Off - Default</p>  <p>M10109_01</p> <p style="text-align: right;">B4</p>
<p>UPU ID-Tag On</p>  <p>M10360_02</p> <p style="text-align: right;">C1</p>	<p>UPU ID-Tag Off - Default</p>  <p>M10361_02</p> <p style="text-align: right;">C2</p>	<p>USPS Intelligent Mail/IMB/ 4-State CB On</p>  <p>M10286_02</p> <p style="text-align: right;">C3</p>	<p>USPS Intelligent Mail/IMB/ 4-State CB Off</p>  <p>M10287_02</p> <p style="text-align: right;">C4</p>
<p>USPS Planet On</p>  <p>M10284_02</p> <p style="text-align: right;">D1</p>	<p>USPS Planet Off - Default</p>  <p>M10285_02</p> <p style="text-align: right;">D2</p>	<p>USPS Postnet On</p>  <p>M10282_02</p> <p style="text-align: right;">D3</p>	<p>USPS Postnet Off - Default</p>  <p>M10283_02</p> <p style="text-align: right;">D4</p>
<p>Keyboard Language Settings</p>	<p>US English Keyboard Mapping</p>  <p>M10419_01</p> <p style="text-align: right;">E2</p>	<p>French Keyboard Mapping</p>  <p>M10420_01</p> <p style="text-align: right;">E3</p>	<p>German Keyboard Mapping</p>  <p>M10421_01</p> <p style="text-align: right;">E4</p>

CR4405 Configuration Guide




NOTE: The configuration change will take effect immediately and be saved to memory.

<p>German-Swiss Keyboard Mapping</p>  <p>M10422_01</p> <p>A1</p>	<p>Italian Keyboard Mapping</p>  <p>M10423_01</p> <p>A2</p>	<p>Spanish Keyboard Mapping</p>  <p>M10424_01</p> <p>A3</p>	<p>Intentionally Blank</p> <p>A4</p>
<p>Reader Communication Settings</p>	<p>iPhone App Communication Mode</p>  <p>M10299_02</p> <p>B2</p>	<p>iPhone Keyboard Communication Mode - Default</p>  <p>M10300_01</p> <p>B3</p>	<p>USB Pass-Through Mode</p>  <p>M10301_01</p> <p>B4</p>
<p>USB Downloader Mode</p>  <p>M10004_02</p> <p>C1</p>	<p>Intentionally Blank</p> <p>C2</p>	<p>Scan Delay</p>	<p>Duplicate Scan Disabled - Default</p>  <p>M10144_01</p> <p>C4</p>
<p>1 Second Duplicate Scan Delay</p>  <p>M10145_01</p> <p>D1</p>	<p>2 Second Duplicate Scan Delay</p>  <p>M10146_01</p> <p>D2</p>	<p>3 Second Duplicate Scan Delay</p>  <p>M10147_01</p> <p>D3</p>	<p>5 Second Duplicate Scan Delay</p>  <p>M10148_01</p> <p>D4</p>
<p>10 Second Duplicate Scan Delay</p>  <p>M10149_01</p> <p>E1</p>	<p>30 Second Duplicate Scan Delay</p>  <p>M10150_01</p> <p>E2</p>	<p>1 Hour Duplicate Scan Delay</p>  <p>M10151_01</p> <p>E3</p>	<p>1 Day Duplicate Scan Delay</p>  <p>M10152_01</p> <p>E4</p>

Power Settings	<p>Sleep Timer - After 1 Minute of Idle Time - Default</p>  <p>M10345_01</p> <p>A2</p>	<p>Sleep Timer - After 15 Minutes of Idle Time - Default</p>  <p>M10346_01</p> <p>A3</p>	<p>Sleep Timer - No Sleep</p>  <p>M10344_01</p> <p>A4</p>
	<p>iPhone Intelligent Charging - Default</p>  <p>M10347_01</p> <p>B1</p>	<p>iPhone Always Charging via Sled</p>  <p>M10348_01</p> <p>B2</p>	<p>iPhone Never Charging via Sled</p>  <p>M10349_01</p> <p>B3</p>
Miscellaneous Settings	<p>Read Both Wide and High Density Field - Default</p>  <p>M10190_01</p> <p>C2</p>	<p>Read High Density Field Only</p>  <p>M10183_01</p> <p>C3</p>	<p>Read Wide Field Only</p>  <p>M10182_01</p> <p>C4</p>
	Reader Commands	<p>Reader ID and Firmware Version</p>  <p>M10157_01</p> <p>D2</p>	<p>Reader Text Commands On</p>  <p>M10136_01</p> <p>D3</p>
Reset, Clear and Save Reader Settings		<p>Reset to App Mode Communication Factory Defaults</p>  <p>M10298_02</p> <p>E2</p>	<p>Reset to App Keyboard Communication Factory Defaults</p>  <p>M10430_01</p> <p>E3</p>

CR4405 Configuration Guide

NOTE: The configuration change will take effect immediately and be saved to memory.

<p>Clear All Stored Data and Images</p>  <p>M10138_02</p> <p style="text-align: right;">A1</p>	<p>Save All Reader Settings</p>  <p>M10159_01</p> <p style="text-align: right;">A2</p>	<p>Reboot Reader</p>  <p>M10296_01</p> <p style="text-align: right;">A3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">A4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">B1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">B2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">B3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">B4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">C1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">D1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">E1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E4</p>